






14. (A) Linkages - Hinges

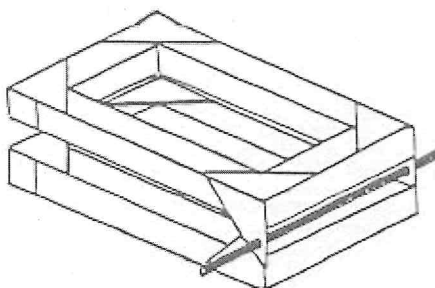




3/16" dowel for hinge

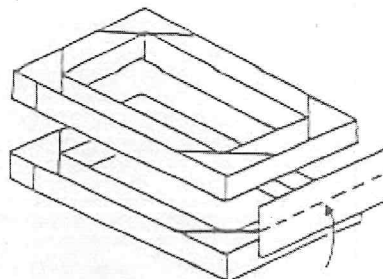




Score care to make a fold

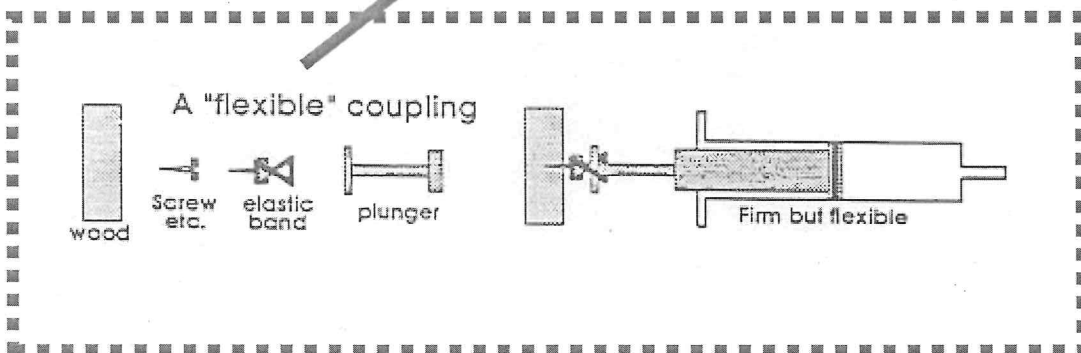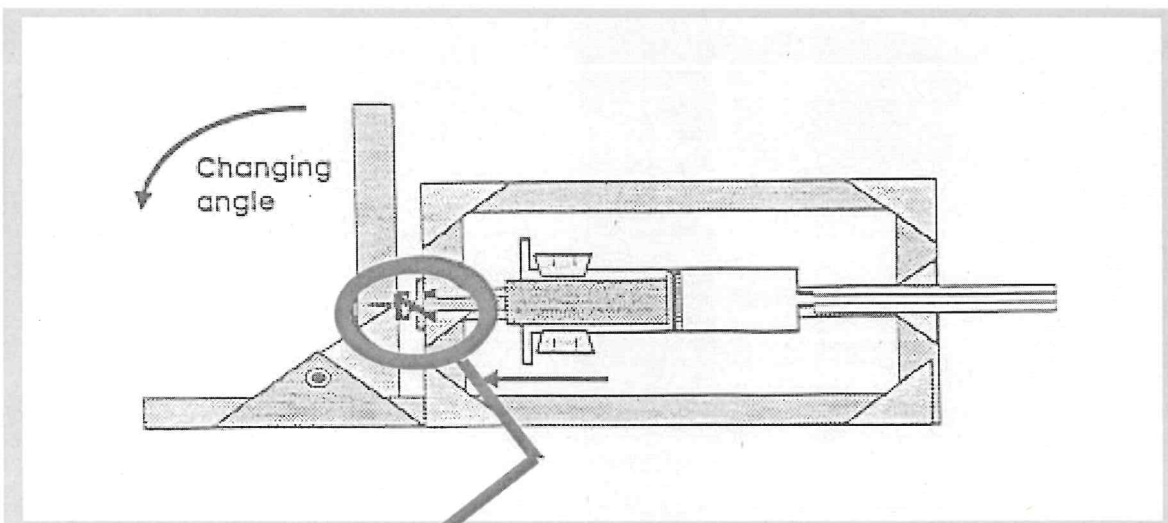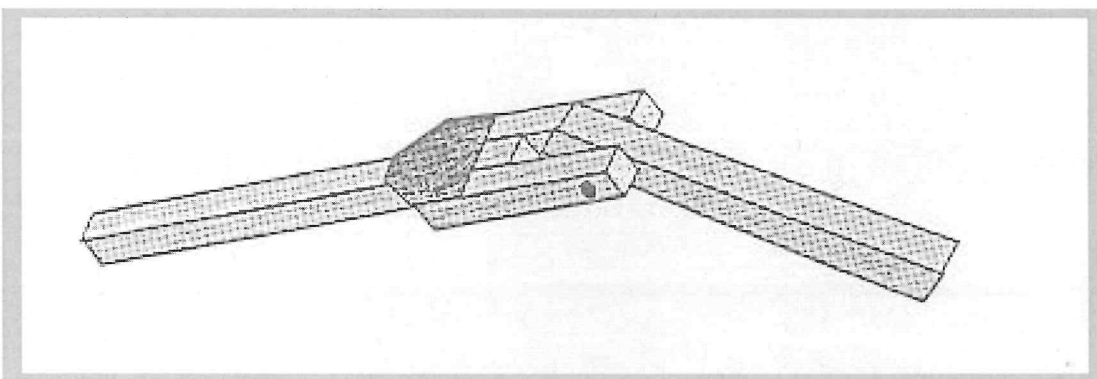




14. (B) Linkages - Elevation

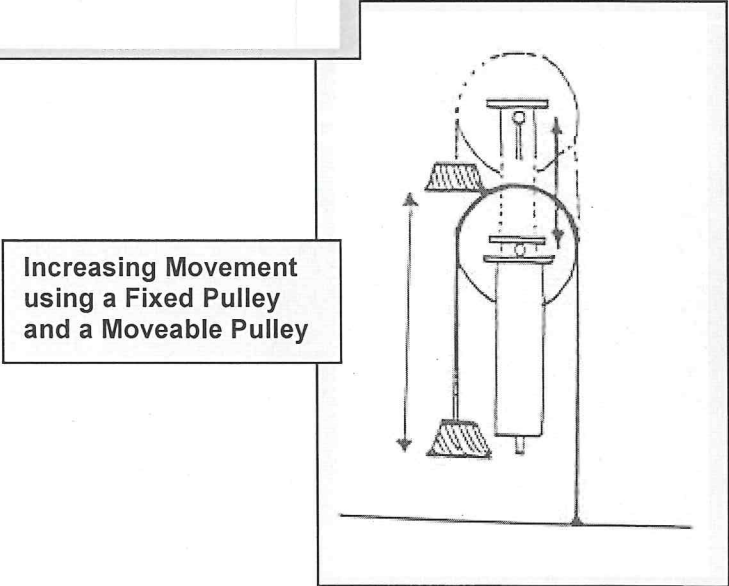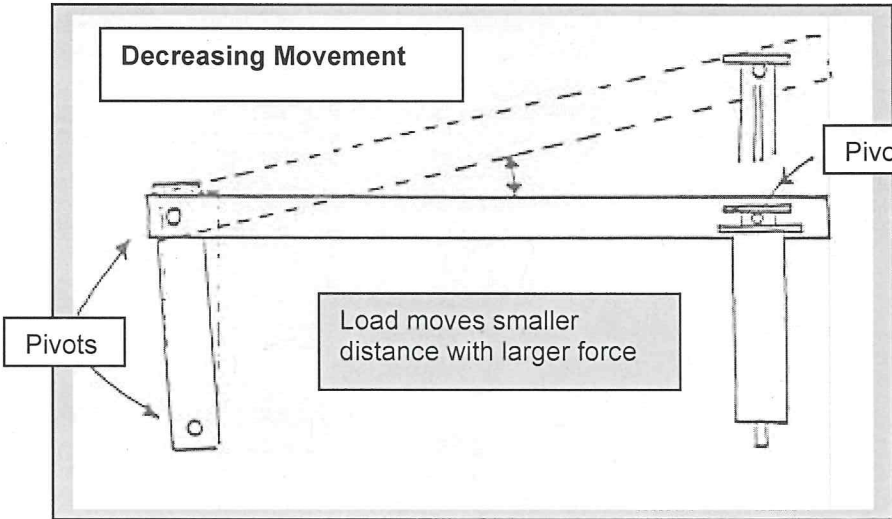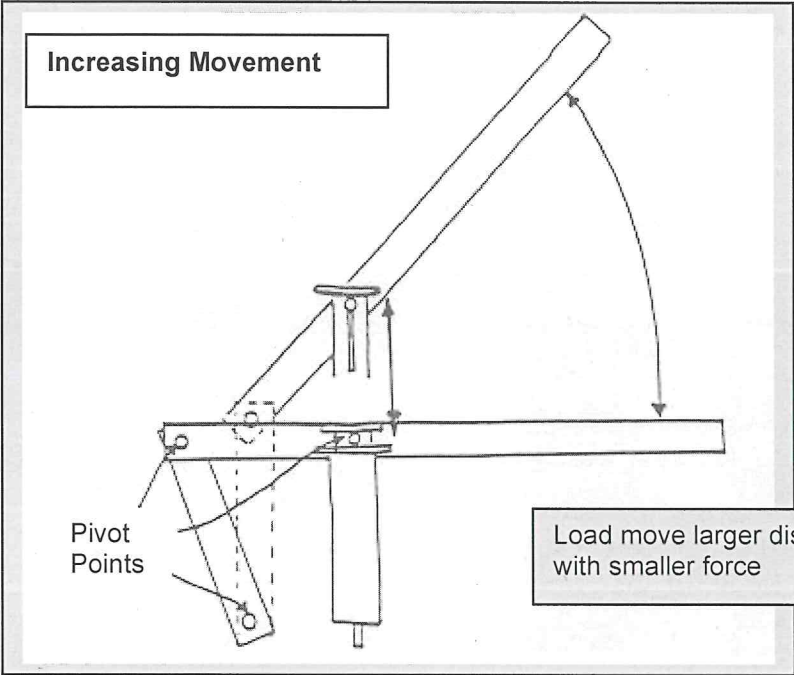









14. (C) Linkages – Rotation

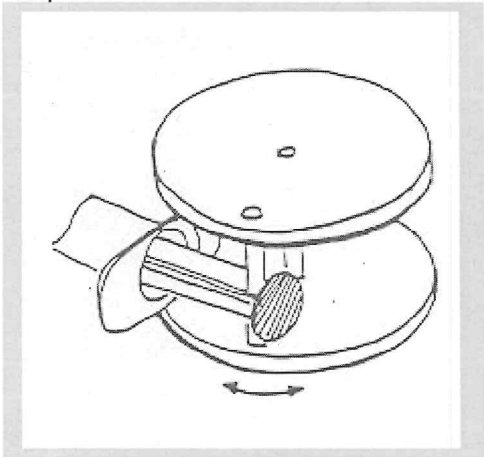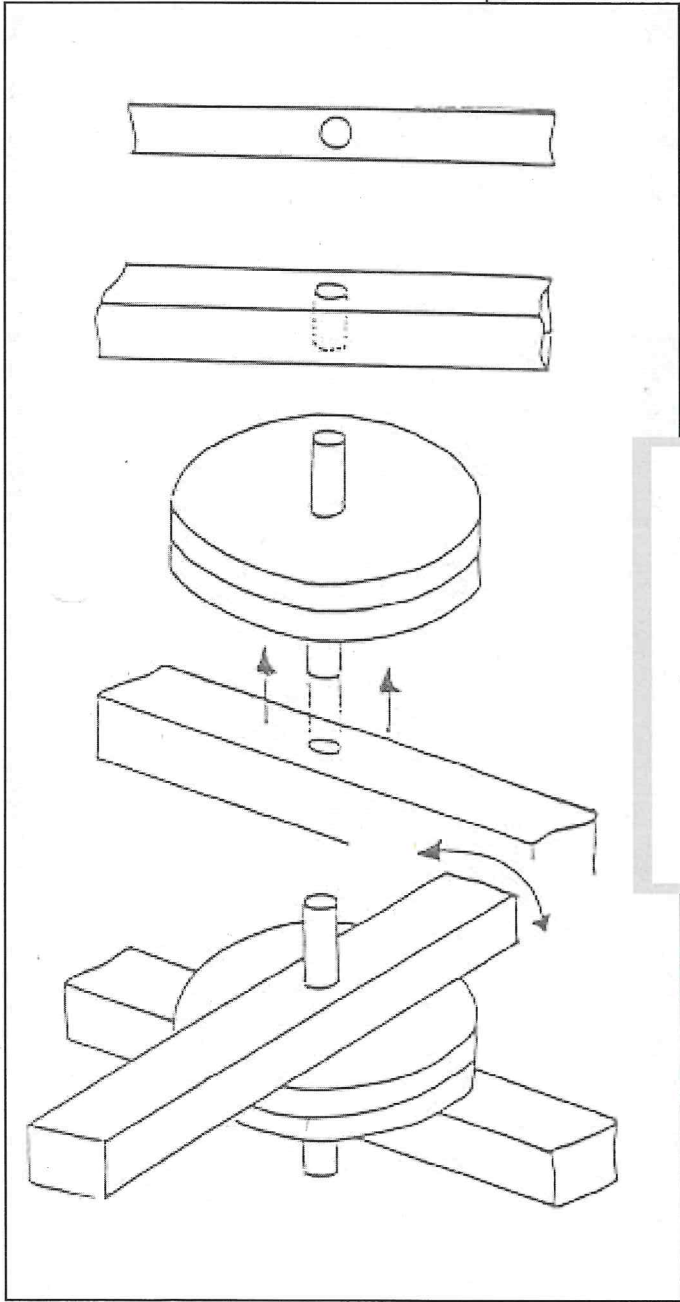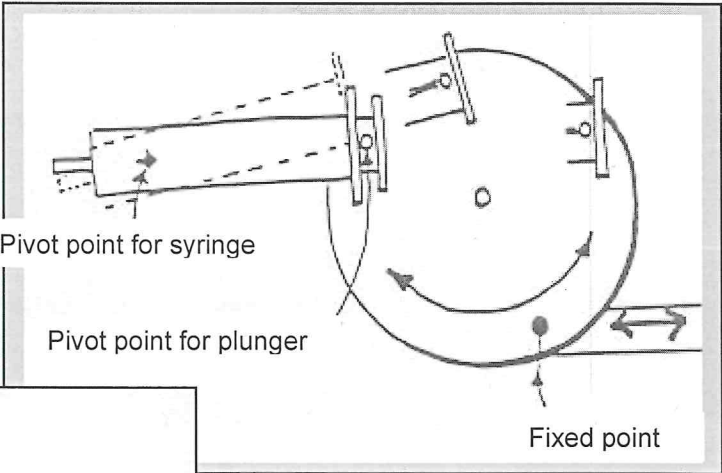

14. (D) LINKAGES – Manipulators

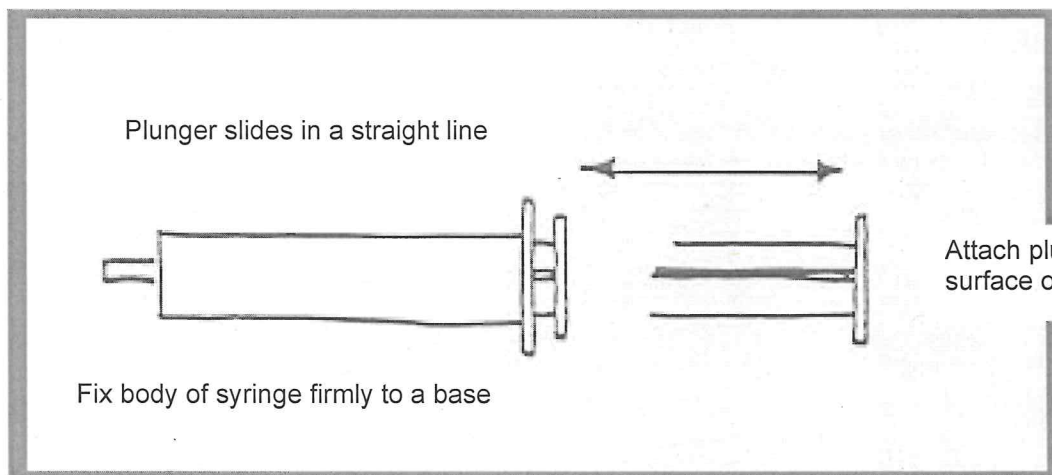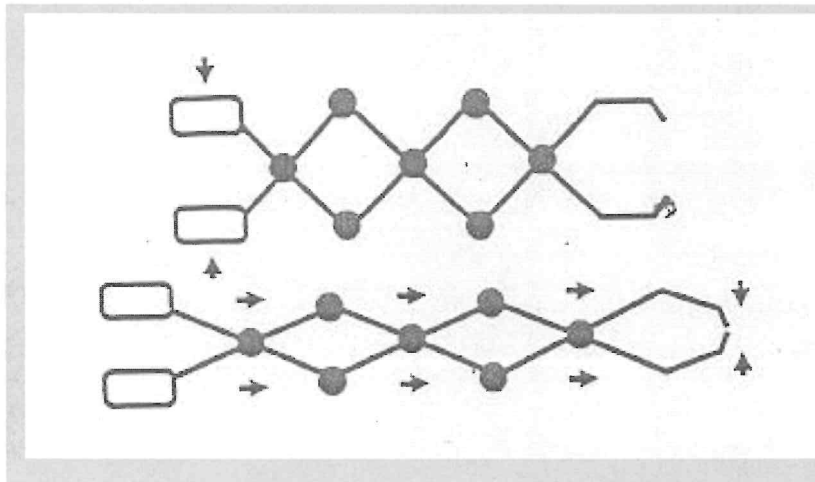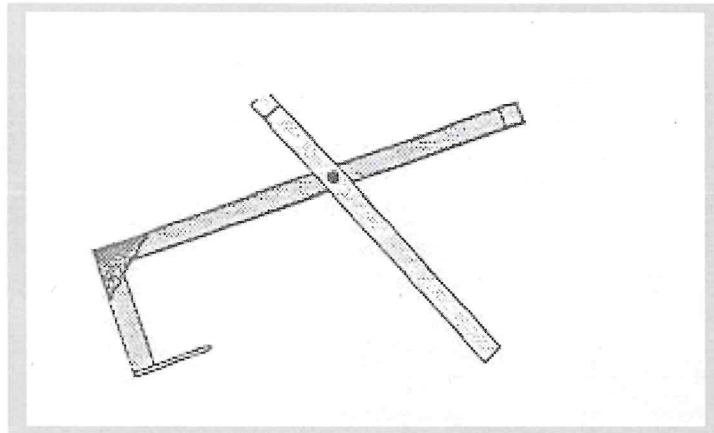


15. Helpful Hints

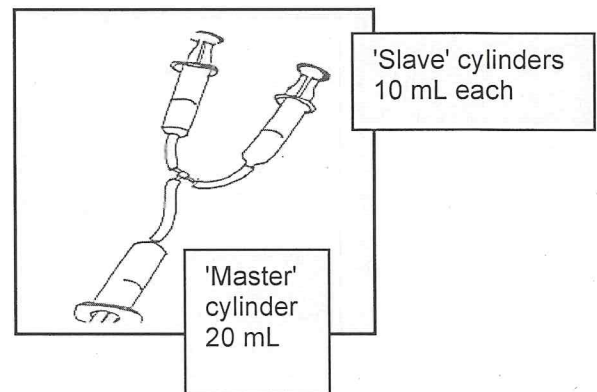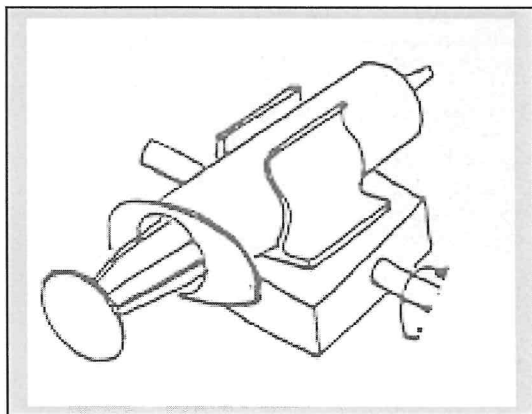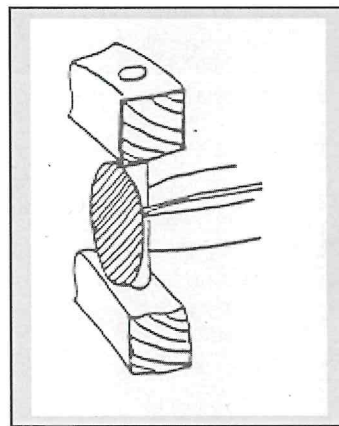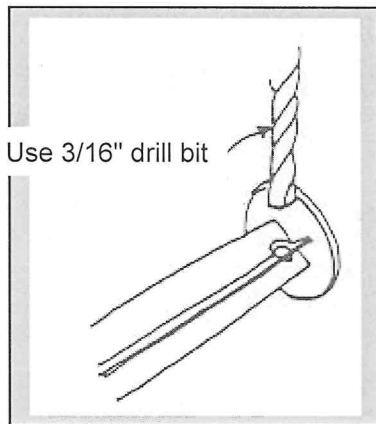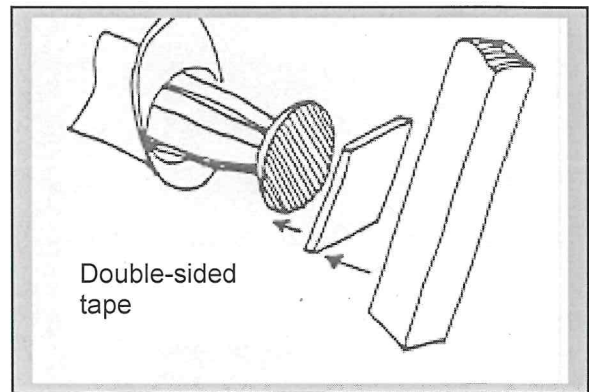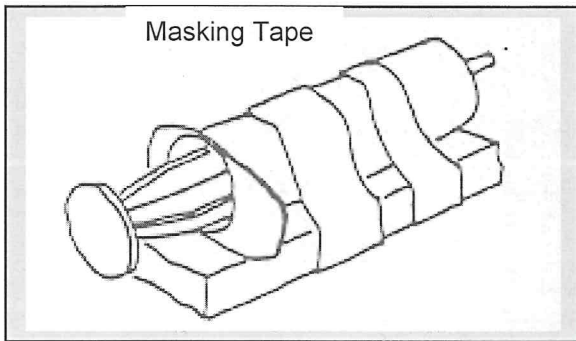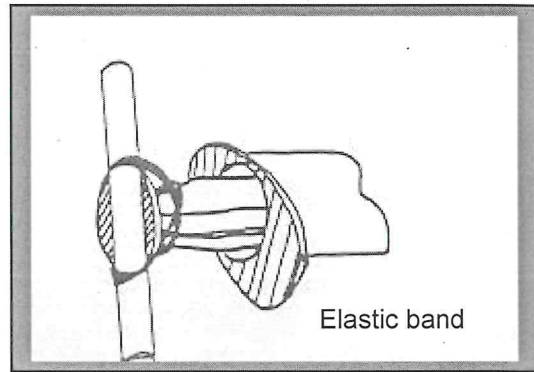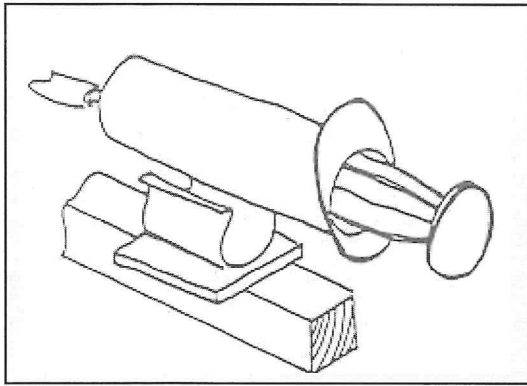

Filling the Syringes with Water

It is important to remove all the air from the syringes and tubing.
To fill – follow the 4 steps below:

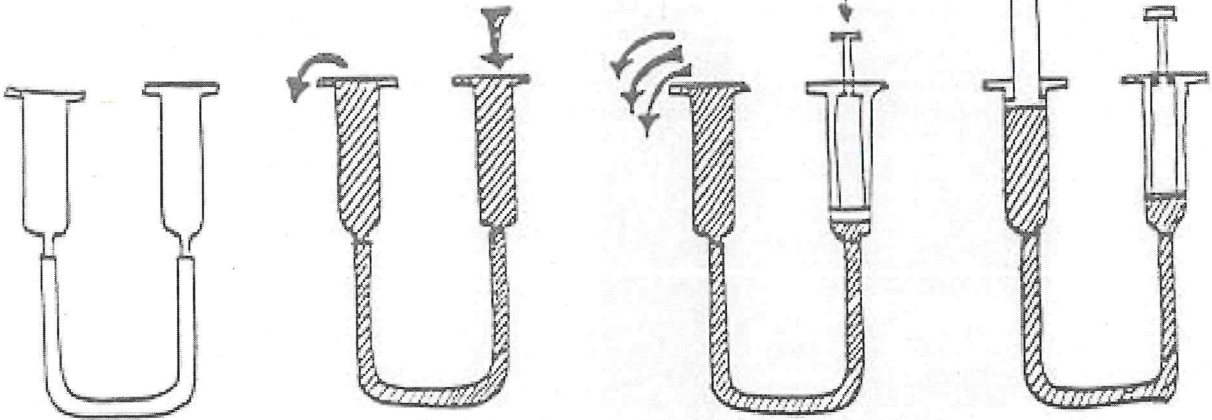

1 – Remove plungers

2 – Fill with water until overflow

3 – Push plunger into one syringe until it is fully inserted

4 – Carefully insert the other plunger

